ME73A

Mikrovalovna pečica

Navodila za uporabo in kuharski priročnik

Garancija podjetja Samsung NE krije klicanja servisa za pojasnjevanje delovanja izdelka, popravilo nepravilne namestitve ali normalno čiščenje ali vzdrževanje.

predstavljajte si vse možnosti

Zahvaljujemo se vam za nakup tega izdelka Samsung. Za prejem popolnejše storitve izdelek registrirajte na

www.samsung.com/register

SAMSUNG

UPORABA KNJIŽICE Z NAVODILI

Kupili ste mikrovalovno pečico SAMSUNG. Navodila za uporabo vsebujejo informacije, ki vam bodo v pomoč pri kuhanju hrane z mikrovalovno pečico.

- Varnostni ukrepi
- Dodatna oprema in posoda, primerna za uporabo
- Uporabni kuharski nasveti
- Kuharski nasveti

LEGENDA SIMBOLOV IN IKON

OPOZORILO	Nevarnosti ali nevarna uporaba, ki lahko povzroči **hudo telesno poškodbo ali smrt**.
PREVIDNO	Nevarnosti ali nevarna uporaba, ki lahko povzroči **lažjo telesno poškodbo ali materialno škodo**.

	Opozorilo: nevarnost požara		Opozorilo: vroča površina
	Opozorilo: elektrika		Opozorilo: eksplozivna snov
	NE poskušajte.		NE dotikajte se.
	NE razstavljajte.		Dosledno upoštevajte navodila.
	Izključite napajalni vtič iz stenske vtičnice.		Prepričajte se, da je aparat ozemljen, da preprečite električni udar.
	Za pomoč pokličite servisni center.		Opomba
	Pomembno		

POMEMBNA VARNOSTNA NAVODILA

POZORNO PREBERITE IN SHRANITE ZA POZNEJŠO UPORABO.

Vedno upoštevajte te varnostne ukrepe.

Pred uporabo pečice se prepričajte, da so upoštevana naslednja navodila.

⚠ OPOZORILO (samo funkcija mikrovalovne pečice)

- **OPOZORILO:** Če so vrata ali tesnila na vratih poškodovana, ne uporabljajte pečice, dokler je ne popravi usposobljena oseba.
- **OPOZORILO:** Vsi nepooblaščeni posegi v pečico, ki vključujejo odstranjevanje pokrova, ki ščiti pred mikrovalovno energijo, so nevarni za osebe, ki niso strokovno usposobljene za take posege.
- **OPOZORILO:** Tekočin in drugih živil ne segrevajte v zaprtih posodah, ker jih lahko raznese.
- Aparat je namenjen samo uporabi v gospodinjstvu.

ME73A_BOL_DE68-03794D-03_SL.indd 2 2013-09-11 2:22:36

- **OPOZORILO:** Otrokom dovolite uporabo pečice brez vašega nadzora samo v primeru, da so bili seznanjeni z ustreznimi navodili za varno uporabo pečice in se zavedajo nevarnosti neustrezne uporabe le-te.
- **OPOZORILO:** Ta aparat smejo uporabljati otroci od 8. leta naprej in fizično, senzorno ali mentalno slabotne osebe ali osebe s premalo izkušenj in znanja, če so pod nadzorom ali so prejele navodila o varni uporabi aparata ter poznajo morebitne nevarnosti. Otroci se z aparatom ne smejo igrati. Otroci ne smejo čistiti in vzdrževati aparata, razen če so stari 8 let ali več in so pod nadzorom.
- Uporabljajte samo pripomočke, ki so primerni za uporabo v mikrovalovni pečici.
- Ko segrevate živila v posodah iz plastike ali papirja, jih morate spremljati, ker obstaja nevarnost vžiga.
- Mikrovalovna pečica je namenjena gretju živil in napitkov. Sušenje hrane ali oblačil in gretje grelnih blazin, copat, gob, vlažnih krp in podobno lahko povzroči poškodbo, vžig ali požar.
- Če opazite dim, izklopite ali izključite aparat. Vrata pustite zaprta, da zadušite morebitni ogenj.
- **OPOZORILO:** Pri segrevanju napitkov v mikrovalovni pečici lahko pride do zapoznelega nenadnega vrenja, zato je treba previdno ravnati s posodo.
- **OPOZORILO:** Vsebino stekleničk za hranjenje in kozarcev z otroško hrano pred uporabo premešajte ali pretresite ter preverite njeno temperaturo, da se izognete opeklinam.
- Neolupljenih jajc in celih trdo kuhanih jajc ne segrevajte v mikrovalovni pečici, saj jih lahko raznese, tudi ko pečica ne greje več.
- Pečico redno čistite in iz nje odstranjujte morebitne ostanke hrane.
- Če pečica ni čista, lahko pride do poslabšanja površin, to pa lahko skrajša življenjsko dobo aparata in privede do nevarnih situacij
- Aparat ni namenjen nameščanju v cestnih vozilih, počitniških prikolicah in podobnih vozilih.

ME73A_BOL_DE68-03794D-03_SL.indd 3 2013-09-11 2:22:36

- Aparata ne smejo uporabljati fizično, senzorno ali mentalno slabotne osebe (in otroci) s premalo izkušenj in znanja, razen če jih nadzira ali jim o uporabi aparata da navodila odgovorna oseba, ki je odgovorna za njihovo varnost.
- Otroke je treba nadzorovati in zagotoviti, da se z aparatom ne igrajo.
- Če je napajalni kabel poškodovan, ga mora zamenjati proizvajalec ali njegov servisni zastopnik ali podobno usposobljena oseba, da se izognete nevarnosti.
- **OPOZORILO:** Tekočin in drugih živil ne segrevajte v zaprtih posodah, ker jih lahko raznese.
- Aparata ne čistite z vodnim curkom.
- Pečico namestite tako, da je usmerjena in na višini, ki omogoča lahek dostop do notranjosti in upravljalnega območja.
- Pred prvo uporabo pečice le-to najprej 10 minut uporabljajte z vodo.
- Če pečica oddaja nenavaden zvok, vonj po zažganem ali dim, takoj izključite napajalni vtič in se obrnite na najbližji servisni center.
- Mikrovalovna pečica naj bo postavljena tako, da imate dostop do vtiča.
- Mikrovalovna pečica se sme uporabljati samo na pultu ali nad njim; uporaba v omarici ni dovoljena.

⚠ OPOZORILO (samo funkcija pečice) - izbirno

- **OPOZORILO:** Ko aparat uporabljate v kombiniranem načinu, smejo otroci uporabljati pečico samo pod nadzorom odrasle osebe zaradi visokih temperatur pri pripravi hrane.
- Aparat se med uporabo zelo segreje. Bodite previdni, da se ne dotaknete grelnika v pečici.
- **OPOZORILO:** Dostopni deli se lahko med uporabo zelo segrejejo. Majhni otroci naj se ne nahajajo v bližini pečice.
- Ne uporabljajte parnega čistilnika.

ME73A_BOL_DE68-03794D-03_SL.indd 4 2013-09-11 2:22:36

OPOZORILO: Zagotovite, da je aparat izklopljen, preden zamenjate lučko, da se izognete možnosti električnega udara.

OPOZORILO: Aparat in njegovi dostopni deli se lahko med uporabo zelo segrejejo. Bodite previdni, da se ne dotaknete grelnika. Otroci, mlajši od 8 let, naj ne bodo v bližini pečice, razen če so pod stalnim nadzorom.

Ta aparat smejo uporabljati otroci od 8. leta naprej in fizično, senzorno ali mentalno slabotne osebe ali osebe s premalo izkušenj in znanja, če so pod nadzorom ali so prejele navodila o varni uporabi aparata ter poznajo morebitne nevarnosti. Otroci se z aparatom ne smejo igrati. Pečice ne smejo čistiti in vzdrževati otroci brez nadzora.

Za čiščenje stekla v vratih pečice ne uporabljajte jedkih čistilnih sredstev ali kovinskih strgal, saj lahko opraskajo površino, s čimer lahko povzročijo, da se steklo zdrobi.

Med delovanjem aparata je temperatura dostopnih površin lahko visoka.

Vrata ali zunanja površina se lahko med delovanjem aparata zelo segrejejo.

Aparat in njegov kabel hranite izven dosega otrok, mlajših od 8 let.

Aparati niso namenjeni upravljanju z zunanjim časovnikom ali ločenim daljinskim upravljalnikom.

Izdelek je industrijska, znanstvena ali medicinska oprema razreda B skupine 2. Skupina 2 zajema vso industrijsko, znanstveno in medicinsko opremo, pri kateri namenoma nastaja radiofrekvenčna energija in/ali je ta uporabljena v obliki elektromagnetnega sevanja za obdelavo snovi, ter opremo za potopno erozijo in obločno varjenje.
Oprema razreda B je oprema, primerna za uporabo v gospodinjstvu in obratih, ki so neposredno priključeni na nizkonapetostno električno omrežje, ki dovaja energijo stavbam, ki se uporabljajo v gospodinjske namene.

ME73A_BOL_DE68-03794D-03_SL.indd 5 2013-09-11 2:22:36

NAMESTITEV MIKROVALOVNE PEČICE

Pečico postavite na ravno površino 85 cm nad tlemi. Površina mora biti dovolj trdna, da lahko prenese njeno težo.

1. Pri namestitvi pečice poskrbite za ustrezno zračenje, tako da pustite vsaj 10 cm prostora za pečico in ob straneh ter 20 cm prostora nad pečico.

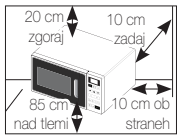

2. Iz notranjosti pečice odstranite vso embalažo.

3. Namestite nosilec in vrtljivo ploščo. Preverite, ali se vrtljiva plošča prosto vrti. (samo model z vrtljivo ploščo)

4. Mikrovalovna pečica naj bo postavljena tako, da imate dostop do vtiča.

- Če je napajalni kabel poškodovan, ga mora zamenjati proizvajalec ali njegov servisni zastopnik ali podobno usposobljena oseba, da se izognete nevarnosti. Za osebno varnost kabel priključite v ustrezno ozemljeno vtičnico na izmenični tok.
- Ne nameščajte mikrovalovne pečice v vročem ali vlažnem okolju v bližini klasične peči ali radiatorja. Treba je upoštevati specifikacije napajanja pečice in vsak dodatni kabel mora izpolnjevati enake standarde kot napajalni kabel, ki je priložen pečici. Pred prvo uporabo očistite notranjost pečice in tesnila na vratih z vlažno krpo.

ČIŠČENJE MIKROVALOVNE PEČICE

Naslednje dele mikrovalovne pečice je treba redno čistiti, da preprečite nabiranje delcev masti in hrane:

- Zunanje in notranje površine
- Vrata in tesnila vrat
- Vrtljivo ploščo in njen nosilec (samo model z vrtljivo ploščo)

- Tesnila vrat morajo biti **VEDNO** čista in vrata se morajo pravilno zapirati.
- Če pečica ni čista, lahko pride do poslabšanja površin, to pa lahko skrajša življenjsko dobo aparata in privede do nevarnih situacij.

ME73A_BOL_DE68-03794D-03_SL.indd 6 2013-09-11 2:22:37

1. Zunanje površine očistite z mehko krpo in mlačno milnico. Splaknite in osušite.
2. Vse madeže na notranjih površinah odstranite s krpo in milnico. Splaknite in osušite.
3. Če želite odstraniti posušene delce hrane in odstraniti vonjave, v pečico postavite kozarec z limoninim sokom in ga deset minut segrevajte z najvišjo močjo.
4. Krožnik po potrebi operite v pomivalnem stroju.

✎ **NE** zmočite odprtin za zračenje.
NIKOLI ne uporabljajte jedkih snovi ali kemičnih raztopin. Bodite posebej pozorni pri čiščenju tesnil vrat, da:
- Se delci ne začnejo nabirati
- Delci ne preprečijo zapiranja vrat

✎ **Po** vsaki uporabi z blagim detergentom očistite notranjost pečice, vendar počakajte, da se pečica prej ohladi, da se izognete poškodbam.

Pri čiščenju zgornjega dela notranjosti pečice je priročno grelnik obrniti navzdol za 45 ° in ga očistiti. (samo model z nihajnim grelnikom)

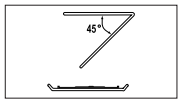

SHRANJEVANJE IN POPRAVILO MIKROVALOVNE PEČICE

Pri shranjevanju in popravilu pečice je treba upoštevati nekaj enostavnih varnostnih ukrepov.
Pečice ne uporabljajte, če so poškodovana vrata ali tesnila vrat:
- Zlomljen tečaj
- Poškodovana tesnila
- Ukrivljeno ali zvito ohišje pečice

Popravila naj izvaja samo usposobljeno servisno osebje.

✎ **NIKOLI** ne odstranjujte zunanjega ohišja pečice. Če je pečica pokvarjena in potrebuje popravilo ali pa ste v dvomih glede njenega stanja:
- Jo izključite iz napajanja
- Obrnite se na najbližji center za pomoč uporabnikom

✎ Če želite pečico začasno pospraviti, izberite suh in neprašen prostor.
Razlog: Prah in vlaga lahko slabo vplivata na dele pečice.

✎ Ta mikrovalovna pečica ni primerna za komercialno uporabo.

ME73A_BOL_DE68-03794D-03_SL.indd 7 2013-09-11 2:22:37

Iz varnostnih razlogov žarnice ne zamenjajte sami. Obrnite se na najbližji pooblaščeni center za pomoč strankam podjetja Samsung, da vam bo žarnico zamenjal usposobljeni tehnik.

⚠ OPOZORILO				
Aparat sme spreminjati ali popravljati samo usposobljeno osebje.	✓	✓	✓	✓
V načinu mikrovalovne pečice ne grejte tekočin in drugih živil v zaprtih posodah.	✓	✓	✓	✓
Zaradi lastne varnosti ne uporabljajte visokotlačnih vodnih ali parnih čistilnikov.	✓	✓	✓	✓
Aparata ne nameščajte blizu grelnika, vnetljivih snovi, na vlažnem, mastnem ali prašnem mestu, na mestu, ki je izpostavljeno neposredni sončni svetlobi ali vodi, kjer lahko pušča plin ali na neravna tla.	✓	✓	✓	✓
Aparat mora biti ozemljen v skladu z lokalnimi in nacionalnimi predpisi.	✓	✓	✓	✓
S pinov napajalnega vtiča in stičnih točk s suho krpo redno odstranjujte tuje snovi, kot sta prah in voda.	✓	✓	✓	✓
Napajalnega vtiča ne vlecite ali prekomerno zvijajte in nanj ne postavljajte težkih predmetov.	✓	✓	✓	✓
V primeru uhajanja plina (na primer propana, utekočinjenega naftnega plina itd.) takoj prezračite, ne da bi se dotaknili napajalnega vtiča.	✓	✓	✓	✓
Napajalnega vtiča se ne dotikajte z mokrimi rokami.	✓	✓	✓	✓
Ko aparat deluje, ga ne izklopite tako, da izključite napajalni kabel.	✓	✓	✓	✓
Ne vstavljajte prstov ali tujih snovi. Če v aparat prodre tuja snov, kot je voda, izključite napajalni kabel in se obrnite na najbližji servisni center.	✓	✓	✓	✓
Aparata ne izpostavljajte prekomernemu pritisku ali udarcem.	✓	✓	✓	✓
Pečice ne postavljajte na občutljiv predmet, kot je korito ali steklen predmet.	✓	✓		
Aparata ne čistite z benzenom, topilom, alkoholom, parnim ali visokotlačnim čistilnikom.	✓	✓	✓	✓
Zagotovite, da uporabljate napetost, frekvenco in tok, ki so navedeni v specifikacijah izdelka.	✓	✓		✓
Napajalni vtič trdno priključite na stensko vtičnico. Ne uporabljajte razdelilnika, podaljška ali električnega pretvornika.	✓	✓	✓	
Napajalnega kabla ne obešajte na kovinski predmet, ne vstavljajte ga med predmete ali za pečico.	✓	✓	✓	
Ne uporabljajte poškodovanega napajalnega vtiča ali napajalnega kabla ali zrahljane stenske vtičnice. Če je napajalni vtič ali napajalni kabel poškodovan, se obrnite na najbližji servisni center.	✓	✓	✓	✓
Na pečico ne zlivajte vode, niti je nanjo ne pršite.	✓	✓		
Na pečico, vanjo ali na vrata pečice ne postavljajte predmetov.	✓	✓	✓	
Na površino pečice ne pršite hlapljivih snovi, kot je insekticid.	✓	✓		
V pečici ne shranjujte vnetljivih snovi. Bodite posebej pozorni pri gretju jedi ali napitkov, ki vsebujejo alkohol, ker lahko alkoholni hlapi pridejo v stik z vročim delom pečice.	✓		✓	✓

ME73A_BOL_DE68-03794D-03_SL.indd 8 2013-09-11 2:22:41

Ko odpirate ali zapirate vrata, naj bodo otroci stran od njih, da se ne udarijo vanje in da jim z vrati ne priprete prstov.	✓	✓	✓	✓
OPOZORILO: Pri segrevanju napitkov v mikrovalovni pečici lahko pride do zapoznelega nenadnega vrenja, zato je treba previdno ravnati s posodo. Da to preprečite, po izklopu pečice VEDNO počakajte 20 sekund, da se izravna temperatura. Po potrebi mešajte med segrevanjem hrane in VEDNO premešajte po segrevanju. V primeru oparin sledite naslednjim navodilom PRVE POMOČI: • Oparjeni predel držite v hladni vodi vsaj 10 minut. • Povijte s čistim in suhim povojem. • Ne nanašajte krem, olj ali losjonov.	✓	✓	✓	✓

⚠ PREVIDNO				
Uporabljajte samo pripomočke, ki so primerni za uporabo v mikrovalovni pečici. NE uporabljajte kovinskih posod, posod z zlatimi ali srebrnimi dodatki, nabodal, vilic itd. S papirnatih ali plastičnih vrečk odstranite žičke za zapiranje. Razlog: Električno iskrenje lahko poškoduje pečico.	✓		✓	✓
V mikrovalovni pečici ne sušite papirja ali oblačil.	✓		✓	✓
Za manjše količine živil uporabite krajši čas, da preprečite pregretje in zažig živil.	✓		✓	✓
Izogibajte se stiku napajalnega kabla in vtiča z vodo in vročino.	✓	✓		
Neolupljenih jajc in celih trdo kuhanih jajc ne segrevajte v mikrovalovni pečici, saj jih lahko raznese, tudi ko pečica ne greje več. Ne segrevajte nepredušno ali vakuumsko zaprtih steklenic, kozarcev, posod, oreščkov v lupini, paradižnika itd.			✓	✓
Ne zakrivajte odprtin za prezračevanje z blagom ali papirjem. Lahko se vnameta zaradi vročega zraka, ki uhaja iz pečice. Pečica se lahko tudi pregreje in se samodejno izklopi ter ostane izklopljena, dokler se ne ohladi dovolj.	✓		✓	
Pri jemanju posode iz pečice vedno uporabljajte rokavice za peko, da se ne opečete.			✓	
Tekočine premešajte na polovici gretja ali po končanju gretja in jih pustite počivati vsaj 20 sekund po gretju, da preprečite nenadno vretje.			✓	
Ko odpirate vrata, stojte za dolžino rok stran od pečice, da vas ne opeče uhajajoči vroč zrak ali para.			✓	
Ne uporabljajte prazne mikrovalovne pečice. Iz varnostnih razlogov se bo mikrovalovna pečica samodejno zaustavila za 30 minut. Priporočamo, da v pečico postavite kozarec vode, ki bo vsrkala mikrovalovno energijo, če boste mikrovalovno pečico nenamerno vklopili.	✓			✓
Pečico namestite v skladu z merami, navedenimi v navodilih. Oglejte si Namestitev mikrovalovne pečice.)	✓		✓	
Bodite previdni pri priključevanju drugih električnih naprav na vtičnice v bližini pečice.	✓	✓	✓	

ME73A_BOL_DE68-03794D-03_SL.indd 9 2013-09-11 2:22:43

VARNOSTNI UKREPI V IZOGIB MOREBITNI IZPOSTAVLJENOSTI PREKOMERNI MIKROVALOVNI ENERGIJI (SAMO FUNKCIJA MIKROVALOVNE PEČICE).

Neupoštevanje naslednjih varnostnih ukrepov lahko povzroči škodljivo izpostavljanje mikrovalovni energiji.

(a) Pečice v nobenem primeru ne vklapljajte, če so vrata odprta, ne poskušajte spreminjati sistema varnostnega zaklepanja (zapahi na vratih) ali vstavljati predmetov v odprtine za varnostni zaklep pečice.

(b) Med vrata in sprednjo stran pečice NE postavljajte nobenih predmetov, na tesnilnih površinah pa ne sme biti nobenih ostankov hrane ali čistil. Redno čistite vrata in tesnilne površine, najprej z vlažno krpo, nato pa z mehko suho krpo.

(c) Če je mikrovalovna pečica pokvarjena, je NE uporabljajte, dokler je ne popravi pooblaščeni serviser. Izjemno pomembno je, da se vrata pečice pravilno zapirajo in da niso poškodovani naslednji deli:

(1) vrata (ukrivljena)

(2) tečaji vrat (zlomljeni ali zrahljani)

(3) tesnila vrat in tesnilne površine

(d) Spremembe ali popravila pečice smejo opravljati samo ustrezno usposobljeni pooblaščeni serviserji.

Samsung bo zaračunal stroške popravila za zamenjavo dodatne opreme ali popravilo kozmetične napake, če je enoto in/ali dodatno opremo poškodoval ali dodatno opremo izgubil kupec. Postavke, ki jih krije ta pogodba:

(a) Udrta, opraskana ali poškodovana vrata, ročaj, zunanja ali nadzorna plošča.

(b) Poškodovan ali manjkajoč pladenj, vodilni valj, priključek za vrtljivo ploščo ali rešetka.

- Aparat uporabljajte samo v predvidene namene, kot je opisano v teh navodilih za uporabo. Opozorila in pomembna varnostna navodila v teh navodilih ne zajemajo vseh možnih razmer in situacij, do katerih lahko pride. Odgovorni ste za to, da uporabljate zdrav razum in da ste previdni pri nameščanju, vzdrževanju in uporabi aparata.
- Ker naslednja navodila za uporabo veljajo za različne modele, se lahko značilnosti vaše mikrovalovne pečice rahlo razlikujejo od značilnosti, opisanih v navodilih, poleg tega morda ne veljajo vsi opozorilni znaki. V primeru vprašanj ali pomislekov se obrnite na najbližji servisni center ali pa pomoč in informacije poiščite na spletnem mestu www.samsung.com.
- Ta mikrovalovna pečica je namenjena gretju živil. Namenjena je samo gospodinjski uporabi. Ne grejte blaga ali blazin, napolnjenih z zrni, saj lahko pride do ožganin ali požara. Proizvajalec ni odgovoren za škodo, ki bi nastala zaradi neustrezne ali nepravilne uporabe aparata.
- Če pečica ni čista, lahko pride do poslabšanja površin, to pa lahko skrajša življenjsko dobo aparata in privede do nevarnih situacij.

USTREZNO ODSTRANJEVANJE TEGA IZDELKA (ODPADNA ELEKTRIČNA IN ELEKTRONSKA OPREMA)

(velja za države z ločenimi sistemi zbiranja)

Oznaka na izdelku, dodatni opremi ali dokumentaciji pomeni, da izdelka in njegove elektronske dodatne opreme (npr. električnega polnilnika, slušalk, kabla USB) ob koncu življenjske dobe ni dovoljeno odvreči med gospodinjske odpadke. Te izdelke ločite od drugih vrst odpadkov in jih odgovorno predajte v recikliranje ter tako spodbudite trajnostno vnovično uporabo materialnih virov. Tako boste preprečili morebitno tveganje za okolje ali zdravje ljudi zaradi nenadzorovanega odstranjevanja odpadkov.

Uporabniki v gospodinjstvih naj se za podrobnosti o tem, kam in kako lahko te izdelke predajo v okolju prijazno recikliranje, obrnejo na trgovino, kjer so izdelek kupili, ali na krajevni upravni organ.

Poslovni uporabniki naj se obrnejo na dobavitelja in preverijo pogoje kupne pogodbe. Tega izdelka in njegove elektronske dodatne opreme pri odstranjevanju ni dovoljeno mešati z drugimi gospodarskimi odpadki.

ME73A_BOL_DE68-03794D-03_SL.indd 10 2013-09-11 2:22:43

KAZALO

Pečica 11
Nadzorna plošča 12
Dodatna oprema 12
Nastavitev časa 13
Kuhanje/Pogrevanje 13
Ravni moči 14
Prekinitev kuhanja 14
Prilagoditev časa kuhanja 14
Nastavitev načina za varčevanje z energijo 14
Uporaba funkcije hitrega pogrevanja/kuhanja 15
Nastavitve funkcije hitrega pogrevanja/kuhanja 15
Uporaba funkcije samodejnega hitrega odmrzovanja 16
Nastavitve samodejnega hitrega odmrzovanja 16
Večstopenjsko kuhanje 17
Posoda in pripomočki, primerni za uporabo 18
Nasveti za odpravljanje težav 19
Tehnični podatki 19

PEČICA

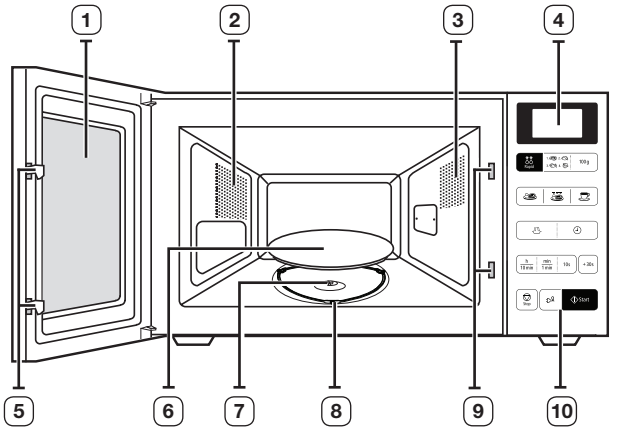

1. VRATA
2. ODPRTINE ZA ZRAČENJE
3. LUČ
4. ZASLON
5. ZAPAHI NA VRATIH
6. VRTLJIVA PLOŠČA
7. PRIKLJUČEK ZA VRTLJIVO PLOŠČO
8. NOSILEC VRTLJIVE PLOŠČE
9. ODPRTINE ZA VARNOSTNI ZAKLEP PEČICE
10. NADZORNA PLOŠČA

ME73A_BOL_DE68-03794D-03_SL.indd 11 2013-09-11 2:22:44

NADZORNA PLOŠČA

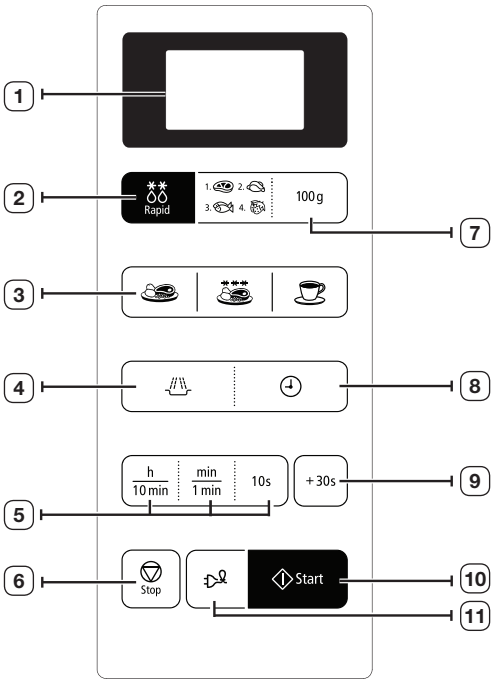

1. ZASLON
2. IZBIRA FUNKCIJE SAMODEJENEGA HITREGA ODMRZOVANJA
3. IZBIRA SAMODEJNEGA POGREVANJA/KUHANJA
4. GUMB NAČINA MIKROVALOV
5. GUMB ZA NASTAVITEV ČASA
6. GUMB STOP/PREKLIC
7. IZBIRA TEŽE
8. NASTAVITEV URE
9. GUMB +30s
10. GUMB START
11. GUMB ZA VARČEVANJE ENERGIJE

DODATNA OPREMA

Priložena je dodatna oprema (odvisno od modela pečice), ki jo lahko uporabite na več načinov.

1. **Nosilec vrtljive plošče**, ki ga postavite na sredino pečice.

   Namen: Nosilec podpira vrtljivo ploščo.

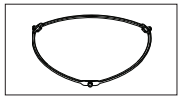

2. **Vrtljiva plošča**, ki jo postavite na nosilec, ki je povezan s priključkom za vrtljivo ploščo.

   Namen: Vrtljiva plošča se uporablja kot glavna kuhalna površina; zlahka jo odstranite in očistite.

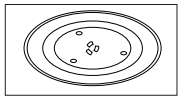

NE uporabljajte mikrovalovne pečice brez nosilca in vrtljive plošče.

ME73A_BOL_DE68-03794D-03_SL.indd 12 2013-09-11 2:22:44

NASTAVITEV ČASA

Mikrovalovna pečica ima vgrajeno uro. Ko se aparat napaja, je na zaslonu samodejno prikazano ":0", "88:88" ali "12:00".
Nastavite trenutni čas. Čas je lahko prikazan v 24- ali 12-urni obliki.
Uro je treba nastaviti:

- Ob prvi namestitvi mikrovalovne pečice
- Po prekinitvi napajanja

Ne pozabite ponastaviti ure ob prehodu s poletnega na zimski čas in obratno.

Funkcija samodejnega varčevanja z energijo

Če med nastavljanjem ali delovanjem z začasno zaustavitvijo ne izberete nobene funkcije, je funkcija preklicana, po 25 minutah pa je prikazana ura. Če so vrata 5 minut odprta, se lučka pečice izklopi.

1. Za prikaz časa v...

24-urni obliki

12-urni obliki

Enkrat ali dvakrat pritisnite gumb **Ura** (🕘).

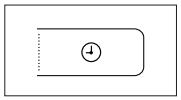

2. Nastavite uro z gumbom **h** in minute z gumbom **min**.

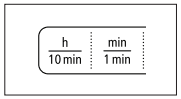

3. Ko se prikaže točen čas, znova pritisnite gumb **Ura** (🕘), da zaženete uro.

Rezultat: Čas se prikaže, ko ne uporabljate mikrovalovne pečice.

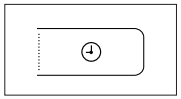

KUHANJE/POGREVANJE

V naslednjem postopku je razloženo, kako se kuha in pogreva hrano.
Vedno preverite nastavitve pečice, preden greste stran od nje.
Najprej postavite hrano na sredino vrtljive plošče in zaprite vrata.

1. Pritisnite gumb **Raven moči** (🍲).

Rezultat: Prikaže se 800 W (največja moč kuhanja):
Izberite ustrezno raven moči tako, da znova pritiskate gumb **Raven moči** (🍲), dokler se ne prikaže ustrezno število vatov. Oglejte si tabelo z ravnmi moči na naslednji strani.

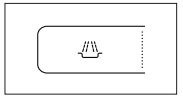

2. Izberite čas kuhanja s pritiskanjem gumbov **10 min**, **1 min** in **10 s**.

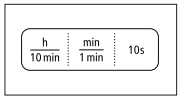

3. Pritisnite gumb **Start** (◇).

Rezultat: Luč v pečici se vklopi in vrtljiva plošča se začne vrteti.
Kuhanje se začne. Ob koncu kuhanja pa se štirikrat oglasi zvočni signal.

Ne vklapljajte mikrovalovne pečice, ko je prazna.

SLOVENŠČINA

ME73A_BOL_DE68-03794D-03_SL.indd 13 2013-09-11 2:22:45

RAVNI MOČI

Izbirate lahko med spodnjimi ravnmi moči.

Raven moči	Izhod
VISOKA	800 W
SREDNJE VISOKA	600 W
SREDNJA	450 W
SREDNJE NIZKA	300 W
ODMRZOVANJE	180 W
NIZKA	100 W

Če izberete višjo raven moči, morate skrajšati čas kuhanja.

Če izberete nižjo raven moči, morate čas kuhanja podaljšati.

PREKINITEV KUHANJA

Kuhanje lahko kadarkoli prekinete, da preverite hrano.

1. Za začasno prekinitev:
   Odprite vrata.

   Rezultat: Kuhanje se ustavi. Če želite nadaljevati s kuhanjem, zaprite vrata in znova pritisnite **Start** (⏀).

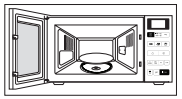

2. Za popolno prekinitev:
   Pritisnite gumb **Stop** (▽).

   Rezultat: Kuhanje se prekine.
   Za preklic nastavitev kuhanja znova pritisnite gumb **Stop** (▽).

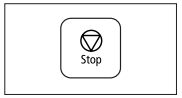

Katero koli nastavitev lahko pred začetkom kuhanja prekinete tako, da enostavno pritisnete gumb **Stop** (▽).

PRILAGODITEV ČASA KUHANJA

Čas kuhanja lahko podaljšate tako, da enkrat pritisnete gumb **+30s** za vsakih 30 sekund, ki jih želite dodati.

1. Enkrat pritisnite gumb **+30s** za vsakih 30 sekund, ki jih želite dodati.

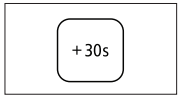

2. Pritisnite gumb **Start** (⏀).

NASTAVITEV NAČINA ZA VARČEVANJE Z ENERGIJO

Pečica je opremljena z načinom za varčevanje z energijo. S to funkcijo prihranite elektriko, ko pečica ni v uporabi.

- Pečica se po 5 minutah neuporabe samodejno vrne v način za varčevanje z energijo. V načinu za varčevanje z energijo je zaslon prazen in pečice ni mogoče uporabljati.
- Za preklop iz načina varčevanja z energijo odprite vrata in zaslon bo prikazal "0". Pečica je pripravljena za uporabo.
- Za uporabo načina za varčevanje z energijo pritisnite gumb **Varčevanje z energijo** (⏀).

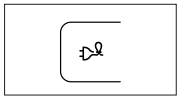

ME73A_BOL_DE68-03794D-03_SL.indd 14 2013-09-11 2:22:45

UPORABA FUNKCIJE HITREGA POGREVANJA/ KUHANJA

Pri funkciji hitrega pogrevanja se čas kuhanja nastavi samodejno.
Število porcij lahko prilagodite z ustreznim številom pritiskov gumba Hitro pogrevanje.
Najprej postavite hrano na sredino vrtljive plošče in zaprite vrata.

Pritisnite želeni gumb **Hitro pogrevanje/kuhanje**, kolikorkrat je potrebno.

Rezultat: Za začetek kuhanja pritisnite gumb **Start** (⏀). Ko je končano:

1) Štirikrat se oglasi zvočni signal pečice.
2) Na konec vas bodo opozorili 3 zvočni signali. (En na minuto.)
3) Ponovno se prikaže trenutni čas.

Primer: Enkrat pritisnite gumb **Pijače**, da pogrejete skodelico kave. Oglejte si tabelo na naslednji strani.

Uporabljajte samo posodo, primerno za uporabo v pečici.

NASTAVITVE FUNKCIJE HITREGA POGREVANJA/KUHANJA

V spodnji tabeli si lahko ogledate različne programe funkcije hitrega pogrevanja/kuhanja, količine, čase počivanja in ustrezne nasvete.

Hrana/Gumb	Velikost porcije	Čas počivanja	Nasveti
Pripravljene jedi	300-350 g 400-450 g	3 min	Postavite na keramični krožnik in pokrijte s folijo za mikrovalovne pečice. Program je primeren za jedi iz treh sestavin (npr. meso z omako, zelenjava in priloga iz krompirja, riža ali testenin).
Zamrznjen pripravljen obrok	300-350 g 400-450 g	4 min	Vzemite zamrznjen pripravljen obrok in preverite, ali je posoda primerna za uporabo v mikrovalovni pečici. Prebodite folijo pripravljenega obroka. Zamrznjen pripravljen obrok postavite na sredino. Program je primeren za zamrznjene pripravljene obroke iz treh sestavin (npr. meso z omako, zelenjava in priloga iz krompirja, riža ali testenin).
Pijače (kava, mleko, čaj, voda pri sobni temperaturi)	150 ml (1 skodelica) 250 ml (1 skodelica za belo kavo)	1-2 min	Nalijte v keramično skodelico in pogrejte nepokrito. Na sredino vrtljive plošče postavite skodelico (150 ml) ali skodelico za belo kavo (250 ml). Pred in po počivanju previdno premešajte.

ME73A_BOL_DE68-03794D-03_SL.indd 15 2013-09-11 2:22:46

UPORABA FUNKCIJE SAMODEJNEGA HITREGA ODMRZOVANJA

Funkcija samodejnega hitrega odmrzovanja omogoča odmrzovanje mesa, perutnine, rib in sadja/jagod.
Čas odmrzovanja in raven moči sta nastavljena samodejno. Enostavno izberite program in težo.

Uporabljajte samo posodo, primerno za uporabo v mikrovalovni pečici.

Najprej postavite zamrznjeno živilo na sredino vrtljive plošče in zaprite vrata.

1. Pritisnite gumb **Hitro odmrzovanje** (⁂).

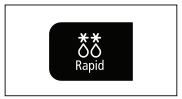

Rezultat: Prikaže se naslednje:

Enkrat ali večkrat pritisnite gumb **Hitro odmrzovanje** (⁂) glede na vrsto hrane, ki jo želite odmrzniti. Za dodatne podrobnosti si oglejte tabelo na naslednji strani.

2. S pritiskanjem gumba **100 g** izberite težo hrane. Nastavite lahko največ 1500 g.

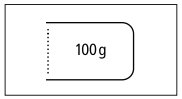

3. Pritisnite gumb **Start** (⏀).

Rezultat:

- Odmrzovanje se začne.
- Na polovici odmrzovanja vas pečica z zvočnim signalom opozori, da morate obrniti hrano.
- Za konec odmrzovanja znova pritisnite gumb **Start** (⏀).

Hrano lahko odmrznete tudi ročno. To naredite z nastavitvijo moči mikrovalovne pečice za funkcijo kuhanja/pogrevanja na 180 W. Za dodatne podrobnosti si oglejte razdelek “Kuhanje/Pogrevanje" na strani 13.

NASTAVITVE SAMODEJNEGA HITREGA ODMRZOVANJA

V spodnji tabeli si lahko ogledate različne programe samodejnega hitrega odmrzovanja, količine, čase počivanja in ustrezne nasvete.
Pred odmrzovanjem odstranite embalažo.
Meso, perutnino, ribe in Sadje/Jagode položite na keramični krožnik.

Koda/Živilo	Porcija	Čas počivanja	Nasveti
1. Meso	200-1500 g	20-90 min	Robove zaščitite z aluminijasto folijo. Ko se oglasi zvočni signal, meso obrnite. Program je primeren za odmrzovanje govedine, jagnjetine, svinjine, zrezkov, zarebrnic in mletega mesa.
2. Perutnina	200-1500 g	20-90 min	Noge in perutničke zaščitite z aluminijasto folijo. Ko se oglasi zvočni signal, perutnino obrnite. Program je primeren za celega piščanca in posamezne kose piščanca.
3. Ribe	200-1500 g	20-80 min	Rep ribe zaščitite z aluminijasto folijo. Ko se oglasi zvočni signal, ribo obrnite. Program je primeren za odmrzovanje celih rib ali ribjih filejev.
4. Sadje/ Jagode	100-600 g	5-20 min	Sadje enakomerno razporedite v plitvi stekleni posodi. Program je primeren za vse vrste sadja.

ME73A_BOL_DE68-03794D-03_SL.indd 16 2013-09-11 2:22:46

VEČSTOPENJSKO KUHANJE

Mikrovalovno pečico je mogoče nastaviti za kuhanje v 3 fazah.

Primer: Želite odmrzniti hrano in jo skuhati, ne da bi vam bilo treba ponastaviti pečico po obeh stopnjah. Tako lahko 500 g ribe odmrznete in skuhate v 3 stopnjah:

- Odmrzovanje
- Kuhanje I
- Kuhanje II

Nastavite lahko 2 ali 3 stopnje večstopenjskega kuhanja.
Če nastavite 3 stopnje, mora biti prva odmrzovanje.
Gumba **Start** (◇) ne pritisnite, dokler niste nastavili zadnje stopnje.

1. Enkrat ali večkrat pritisnite gumb **Hitro odmrzovanje** ( ).

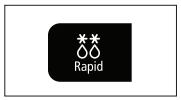

2. Z ustreznim številom pritiskov gumba **100 g** nastavite težo (npr. 500 g).

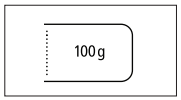

3. Pritisnite gumb **Raven moči** ( ).
Način mikrovalov (I):
; po potrebi nastavite raven moči (npr. 600 W) s ponovnim enkratnim ali večkratnim pritiskom gumba **Raven moči** ( ).

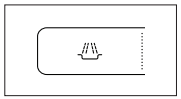

4. Nastavite čas kuhanja z ustreznim številom pritiskov gumbov **10 min**, **1 min** in **10 s** (npr. 4 minute).

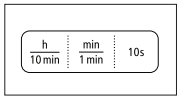

5. Pritisnite gumb **Raven moči** ( ).
Način mikrovalov (II):
; po potrebi nastavite raven moči (npr. 450 W) s ponovnim enkratnim ali večkratnim pritiskom gumba **Raven moči** ( ).

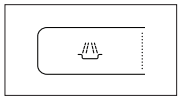

6. Nastavite čas kuhanja z ustreznim številom pritiskov gumbov **10 min**, **1 min** in **10 s** (npr. 5 minut).

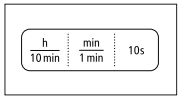

7. Pritisnite gumb **Start** (◇).

Rezultat: Eden za drugim so izbrani 3 načini [odmrzovanje in kuhanje (I, II)]. Glede na izbrani način odmrzovanja, lahko na polovici odmrzovanja pečica zapiska, da vas spomni, da obrnete hrano.

- Ko je kuhanje končano, se štirikrat oglasi zvočni signal pečice.

ME73A_BOL_DE68-03794D-03_SL.indd 17 2013-09-11 2:22:46

POSODA IN PRIPOMOČKI, PRIMERNI ZA UPORABO

Če želite pripravljati jedi v mikrovalovni pečici, morajo mikrovalovi prodreti v živilo, ne da bi jih pri tem posoda vsrkala ali odbila. Zato morate biti previdni pri izbiri posode. Če je na posodi označeno, da je primerna za uporabo v mikrovalovni pečici, ste lahko brez skrbi. V spodnji tabeli so naštete različne vrste posode z navodili o uporabi v mikrovalovni pečici.

Posoda	Primerno za uporabo v mikrovalovni pečici	Opombe
Aluminijasta folija	✓✗	Lahko se uporablja v manjših količinah za zaščito posameznih delov. Če je folija preblizu sten pečice ali če je folije preveč, lahko pride do iskrenja.
Krožnik za zapečene jedi	✓	Predhodno ne segrevajte dlje kot 8 minut.
Porcelan in keramika	✓	Porcelan, lončevina in keramika z glazuro so običajno primerni, če nimajo kovinskih dodatkov.
Plastični in papirnati krožniki za enkratno uporabo	✓	V njih so pakirane nekatere zamrznjene jedi.
Embalaža za hitro pripravljene obroke		
• Posoda in kozarci iz polistirena	✓	Lahko se uporabljajo za pogrevanje jedi. Polistiren se lahko pri prekomernem segrevanju stali.
• Papirnate vrečke ali časopisni papir	✗	Lahko se vnamejo.
• Reciklirani papir ali kovinski dodatki na posodi	✗	Lahko povzročijo iskrenje.
Steklena posoda		
• Keramični pekači	✓	Lahko se uporabljajo, če nimajo kovinskih dodatkov.
• Kristalno steklo	✓	Lahko se uporablja za pogrevanje jedi ali tekočin. Občutljivo steklo se lahko ob nenadnem segrevanju razbije ali poči.
• Stekleni kozarci	✓	Pokrove je treba odstraniti. Primerno samo za pogrevanje.
Kovinski predmeti		
• Posoda	✗	Lahko povzročijo iskrenje ali požar.
• Žičke za zapiranje vrečk za zamrzovanje	✗	
Papir		
• Krožniki, kozarci, prtički in papirnate brisače	✓	Za kratkotrajno kuhanje in pogrevanje. Za vsrkavanje odvečne vlage.
• Reciklirani papir	✗	Lahko povzročijo iskrenje.
Plastika		
• Posoda	✓	Še posebej če so iz termoplastičnih snovi, odpornih na toploto. Druge vrste plastičnih snovi lahko pri visokih temperaturah izgubijo obliko ali barvo. Ne uporabljajte plastičnih izdelkov iz melamina.
• Folija za živila	✓	Lahko se uporablja za ohranjanje vlage. Ne sme se dotikati živila. Pazite, da se pri odstranjevanju folije ne oparite.
• Vrečke za zamrzovanje	✓✗	Samo v primeru, da jih je mogoče segreti v vreli vodi ali pečici. Ne smejo biti nepredušno zaprte. Po potrebi naluknjajte z vilicami.
Papir, odporen na vosek in maščobe	✓	Lahko se uporablja za ohranjanje vlage in preprečevanje brizganja.

✓ **: Priporočeno**
✓✗ **: Previdno**
✗ **: Ni varno**

ME73A_BOL_DE68-03794D-03_SL.indd 18 2013-09-11 2:22:46

NASVETI ZA ODPRAVLJANJE TEŽAV

Če ste naleteli na katero od spodaj navedenih težav, jih poskusite odpraviti s pomočjo danih navodil.

To je običajen pojav.

- Kondenzacija v pečici.
- Pri vratih in ohišju uhaja zrak.
- Pri vratih in ohišju se odbija svetloba.
- Ob vratih in odprtinah za zračenje uhaja para.

Ko pritisnete gumb (⏀), se pečica ne vklopi.

- So vrata povsem zaprta?

Hrana sploh ni skuhana.

- Ste pravilno nastavili časovnik in/ali pritisnili gumb (⏀)?
- So vrata zaprta?
- Ste preobremenili električno omrežje in povzročili, da je pregorela varovalka ali se je sprožil izklopnik?

Hrana je preveč ali premalo kuhana.

- Je bil čas kuhanja nastavljen za ustrezno vrsto hrane?
- Je bila izbrana ustrezna raven moči?

V pečici prihaja do iskrenja in prasketanja.

- Ste uporabili posodo s kovinskimi dodatki?
- Ste v pečici pozabili vilice ali kak drug kovinski pripomoček?
- Je aluminijasta folija preblizu notranjosti pečice?

Žarnica ne deluje.

- Iz varnostnih razlogov žarnice ne menjajte sami. Obrnite se na najbližji pooblaščeni center za pomoč strankam podjetja Samsung, da vam bo žarnico zamenjal usposobljeni tehnik.

Pečica povzroča motnje pri sprejemu radijskega ali televizijskega signala.

- Med delovanjem pečice je opaziti rahle motnje v televizijskem ali radijskem signalu. To je običajen pojav. Težavo odpravite tako, da pečice ne namestite v bližini televizorjev, radijskih sprejemnikov in anten.
- Če mikroprocesor v pečici zazna motnje, lahko pride do ponastavitve zaslona. Težavo odpravite tako, da izključite napajalni kabel in ga znova priključite. Ponastavite čas.

Če si z naštetimi smernicami ne morete pomagati pri odpravljanju težav, se obrnite na lokalni center za pomoč strankam podjetja SAMSUNG. Preberite naslednje informacije:

- Model in serijske številke, ki so običajno natisnjene na hrbtni strani pečice
- Podrobnosti garancije
- Jasen opis težave

Obrnite se na najbližjega trgovca ali službo za pomoč kupcem izdelkov SAMSUNG.

TEHNIČNI PODATKI

SAMSUNG se trudi, da bi svoje izdelke vedno izboljševal. Spremembe specifikacij pečice in navodil za uporabnike so mogoče brez predhodnega obvestila.

Model	ME73A
Vir napajanja	230 V ~ 50 Hz
Poraba energije Mikrovalovi	 1150 W
Izhodna moč	100 W / 800 W (IEC-705)
Delovna frekvenca	2450 MHz
Magnetron	OM75S(31)
Metoda hlajenja	Motorček hladilnega ventilatorja
Mere (Š x V x G) Zunanje Notranje	 489 x 275 x 349 mm 330 x 211 x 309 mm
Prostornina	20 litrov
Teža Neto teža	 Pribl. 11,5 kg

ME73A_BOL_DE68-03794D-03_SL.indd 19 2013-09-11 2:22:47

VPRAŠANJA ALI KOMENTARJI

DRŽAVA	POKLIČITE	ALI NAS OBIŠČITE V SPLETU NA
BOSNIA	051 133 1999	www.samsung.com
BULGARIA	07001 33 11, normal tariff	
CROATIA	062 - SAMSUNG (062 726 786)	
CZECH	800 - SAMSUNG (800-726786)	
HUNGARY	06-80-SAMSUNG (726-7864)	
MACEDONIA	023 207 777	
MONTENEGRO	020 405 888	
POLAND	0 801-1SAMSUNG(172-678) * lub +48 22 607-93-33 ** * (całkowity koszt połączenia jak za 1 impuls według taryfy operatora) ** (koszt połączenia według taryfy operatora)	www.samsung.com/pl
ROMANIA	08008 SAMSUNG (08008 726 7864) TOLL FREE No.	www.samsung.com
SERBIA	+381 11 321 6899 (old number still active 0700 7267864)	
SLOVAKIA	0800 - SAMSUNG (0800-726 786)	
LITHUANIA	8-800-77777	www.samsung.com/lt
LATVIA	8000-7267	www.samsung.com/lv
ESTONIA	800-7267	www.samsung.com/ee
SLOVENIA	080 - MYSAMSUNG (080 69 726 7864)	www.samsung.com/si

Št. kode: DE68-03794D-03

ME73A

Microwave Oven

Owner's Instructions & Cooking Guide

Please be advised that the Samsung warranty does NOT cover service calls to explain product operation, correct improper installation, or perform normal cleaning or maintenance.

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at

www.samsung.com/register

SAMSUNG

USING THIS INSTRUCTION BOOKLET

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips
- Cooking tips

LEGEND FOR SYMBOLS AND ICONS

WARNING	Hazards or unsafe practices that may result in **severe personal injury or death**.
CAUTION	Hazards or unsafe practices that may result in **minor personal injury or property damage**.

	Warning; Fire hazard		Warning; Hot surface
	Warning; Electricity		Warning; Explosive material
	Do NOT attempt.		Do NOT touch.
	Do NOT disassemble.		Follow directions explicitly.
	Unplug the power plug from the wall socket.		Make sure the machine is grounded to prevent electric shock.
	Call the service center for help.		Note
	Important		

IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Make sure that these safety precautions are obeyed at all times.

Before using the oven, confirm that the following instructions are followed.

⚠ WARNING (Microwave function only)

- **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.
- **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.
- This appliance is intended to be used in household only.

ME73A_BOL_DE68-03794D-03_EN.indd 2 2013-09-11 1:58:07

- **WARNING:** Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.
- **WARNING:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Only use utensils that are suitable for use in microwave ovens.
- When heating food in plasitic or paper containers, keep an eye on the oven due to the possibility of ignitions.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- **WARNING:** Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.
- **WARNING:** The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.
- The oven should be cleaned regularly and any food deposites removed.

ME73A_BOL_DE68-03794D-03_EN.indd 3 2013-09-11 1:58:07

- Failure to maintain the oven in a clean conditioin could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- The appliance is not intended for installing in road vehicles, caravans and similar vehicles etc.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Liquids or other foods must not be heated in sealed containers since they are liable to explode;
- The appliance should not be cleaned with a water jet.
- This oven should be positioned proper direction and height permitting easy access to cavity and control area.
- Before using the your oven first time, oven should be operated with the water during 10 minute and then used.
- If the oven generates a strange noise, a burning smell, or smoke is emitted, unplug the power plug immediately and contact your nearest service center.
- The microwave oven has to be positioned so that plug is accessible.
- The microwave oven is intended to be used on the counter or counter top use only, the microwave oven shall not be placed in a cabinet.

⚠ WARNING (Oven function only) - Optional

- **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
- During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

ME73A_BOL_DE68-03794D-03_EN.indd 4 2013-09-11 1:58:07

WARNING: Accessible parts may become hot during use. Young children should be kept away.

A steam cleaner is not to be used.

WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

WARNING: The appliance and its accessible parts become hot during use.
Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.

The temperature of accessible surfaces may be high when the appliance is operating.

The door or the outer surface may get hot when the appliance is operating.

Keep the appliance and its cord out of reach of children less than 8 years.

Appliances are not intended to be operated by means of an external timer or separate remote-control system.

This product is a Group 2 Class B ISM equipment. The definition of group 2 which contains all ISM equipment in which radio-frequency energy is intentionally generated and/or used in the form of electromagnetic radiation for the treatment of material, and EDM and arc welding equipment.
For Class B equipment is equipment suitable for use in domestic establishments and in establishments directly connected to a low voltage power supply network which supplies buildings used for domestic purposes.

ME73A_BOL_DE68-03794D-03_EN.indd 5 2013-09-11 1:58:07

INSTALLING YOUR MICROWAVE OVEN

Place the oven on a flat level surface 85 cm above the floor. The surface should be strong enough to safety bear the weight of the oven.

1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.

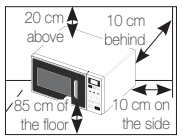

2. Remove all packing materials inside the oven.

3. Install the roller ring and turntable. Check that the turntable rotates freely. (Turntable type model only)

4. This microwave oven has to be positioned so that plug is accessible.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
  For your personal safety, plug the cable into a proper AC earthed socket.
- Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

CLEANING YOUR MICROWAVE OVEN

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- Inside and outside surfaces
- Door and door seals
- Turntable and Roller rings (Turntable type model only)

- **ALWAYS** ensure that the door seals are clean and the door closes properly.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.

ME73A_BOL_DE68-03794D-03_EN.indd 6 2013-09-11 1:58:08

2. Remove any splashes or stains on the inside surfaces of oven with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice in the oven and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

- **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents.Take particular care when cleaning the door seals to ensure that no particles:
  - Accumulate
  - Prevent the door from closing correctly
- **Clean** the microwave oven cavity right after each use with a mild detergent solution, but let the microwave oven cool down before cleaning in order to avoid injury.

When cleaning the upper part inside the cavity, it will be convenient to turn heater downward by 45 ° and clean it.

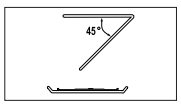

(Swing heater model only)

STORING AND REPAIRING YOUR MICROWAVE OVEN

A few simple precautions should be taken when storing or having your microwave oven serviced.
The oven must not be used if the door or door seals are damaged:

- Broken hinge
- Deteriorated seals
- Distorted or bent oven casing

Only a qualified microwave service technician should perform repair

- **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:
  - Unplug it from the wall socket
  - Contact the nearest after-sales service centre
- If you wish to store your oven away temporarily, choose a dry, dustfree place. **Reason :** Dust and damp may adversely affect the working parts in the oven.

ME73A_BOL_DE68-03794D-03_EN.indd 7 2013-09-11 1:58:08

- This microwave oven is not intended for commercial use.
- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care,to arrange for a qualified engineer to replace the bulb.

⚠ WARNING				
Only qualified staff should be allowed to modify or repair the appliance.	✓	✓	✓	✓
Do not heat liquids and other food in sealed containers for microwave function.	✓	✓	✓	✓
For your safety, do not use high-pressure water cleaners or steam jet cleaners.	✓	✓	✓	✓
Do not install this appliance; near heater, inflammable material; in a humid, oily or dusty location, in a location exposed to direct sunlight and water or where gas may leak; on un level ground.	✓	✓	✓	✓
This appliance must be properly grounded in accordance with local and national codes.	✓	✓	✓	✓
Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.	✓	✓	✓	✓
Do not pull or excessively bend or place heavy objecton the power cord.	✓	✓	✓	✓
In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug.	✓	✓	✓	✓
Do not touch the power plug with wet hands.	✓	✓	✓	✓
Do not turn the appliance off by unplugging the power plug while an operation is in progress.	✓	✓	✓	✓
Do not insert fingers or foreign substances, If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.	✓	✓	✓	✓
Do not apply excessive pressure or impact to the appliance.	✓	✓	✓	✓
Do not place the oven over a fragile object such as a sink or glass object.	✓	✓		
Do not use benzene, thinner, alcohol, steam cleaner or high pressure cleaner to clean the appliance.	✓	✓	✓	✓
Ensure that the power voltage, frequency and current are the same as those of the product specifications.	✓	✓		✓
Plug the power plug into the wall socket firmly. Do not use a multiple plug adapter, an extension cord or an electric transformer.	✓	✓	✓	
Do not hook the power cord on a metal object, insert the power cord between the objects or behind the oven.	✓	✓	✓	
Do not use a damaged power plug, damaged power cord or loose wall socket. When the power plug or power cord is damaged, contact your nearest service centre.	✓	✓	✓	✓
Do not pour or directly spray water onto the oven.	✓	✓		
Do not place objects on the oven, inside or on the door of the oven.	✓	✓	✓	
Do not spray volatile material such as insecticide onto the surface of the oven.	✓	✓		

ME73A_BOL_DE68-03794D-03_EN.indd 8 2013-09-11 1:58:12

Do not store flammable materials in the oven. Take special care when heating dishes or drinks that contain alcohol as alcohol vapours may contact a hot part of the oven.	✓		✓	✓
Keep children away from the door when opening or closing it as they may bump themselves on the door or catch their fingers in the door.	✓	✓	✓	✓
WARNING: Microwave heating of beverages can result in delayed eruptive boiling,therefore care must be taken when handling the container; To prevent this situation ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize. Stir during heating, if necessary, and ALWAYS stir after heating. In the event of scalding, follow these FIRST AID instructions: • Immerse the scalded area in cold water for at least 10 minutes. • Cover with a clean, dry dressing. • Do not apply any creams, oils or lotions.	✓	✓	✓	✓
⚠ CAUTION				
Only use utensils that are suitable for use in microwave ovens; DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc. Remove wire twist ties from paper or plastic bags. Reason: Electric arcing or sparking may occur and may damage the oven.	✓		✓	✓
Do not use your microwave oven to dry papers or clothes.	✓		✓	✓
Use shorter times for smaller amounts of food to prevent overheating and burning food.	✓		✓	✓

Do not immerse the power cable or power plug in water and keep the power cable away from heat.	✓	✓		
Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended; Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts inshells, tomatoes etc.			✓	✓
Do not cover the ventilation slots with cloth or paper. They may catch fire as hot air escapes from the oven. The oven may also overheat and switch itself off automatically, and will remain off until it cools sufficiently.	✓		✓	
Always use oven mitts when removing a dish from the oven to avoid unintentional burns.			✓	
Stir liquids halfway during heating or after heating ends and allow the liquid stand at least 20 seconds after heating to prevent eruptive boiling.			✓	
Stand at arms length from the oven when opening the door to avoid getting scalded by escaping hot air or steam.			✓	
Do not operate the microwave oven when it is empty. The microwave oven will automatically shut down for 30 minutes for safety purposes. We recommend placing a glass of water inside the oven at all times to absorb microwave energy in case the microwave oven is started accidentally.	✓			✓
Install the oven in compliance with the clearances stated in this manual. (See installing your microwave oven.)	✓		✓	
Take care when connecting other electrical appliances to sockets near the oven.	✓	✓	✓	

ME73A_BOL_DE68-03794D-03_EN.indd 9 2013-09-11 1:58:14

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY. (MICROWAVE FUNCTION ONLY)

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do NOT place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do NOT operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:

(1) door (bent)

(2) door hinges (broken or loose)

(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Samsung will charge a repair fee for replacing an accessory or repairing a cosmetic defect if the damage to the unit and/or damage to or loss of the accessory was caused by the customer. Items this stipulation covers include:

(a) A Dented, Scratched, or Broken Door, Handle, Out-Panel, or Control Panel.

(b) A Broken or missing Tray, Guide Roller, Coupler, or Wire Rack.

- Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your appliance.
- Because these following operating instructions cover various models, the characteristics of your microwave oven may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and information online at www.samsung.com.
- This microwave oven is supposed for heating food. It is intended for domestic home-use only. Do not heat any type of textiles or cushions filled with grains, which could cause burns and fire. The manufacturer cannot be held liable for damage caused by improper or incorrect use of the appliance.
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possible result in a hazardous situation.

CORRECT DISPOSAL OF THIS PRODUCT (WASTE ELECTRICAL & ELECTRONIC EQUIPMENT)

(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.
Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.
Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

ME73A_BOL_DE68-03794D-03_EN.indd 10 2013-09-11 1:58:14

CONTENTS

Oven 11
Control panel 12
Accessories 12
Setting the time 13
Cooking/Reheating 13
Power levels 14
Stopping the cooking 14
Adjusting the cooking time 14
Setting the energy save mode 14
Using the instant reheat/cook feature 15
Instant reheat/cook settings 15
Using the auto rapid defrost feature 16
Auto rapid defrost settings 16
Multistage cooking 17
Cookware guide 18
What to do if you are in doubt or have a problem 19
Technical specifications 19

OVEN

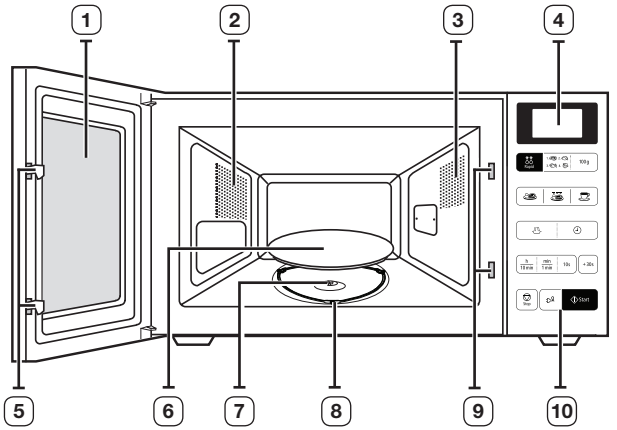

1. DOOR
2. VENTILATION HOLES
3. LIGHT
4. DISPLAY
5. DOOR LATCHES
6. TURNTABLE
7. COUPLER
8. ROLLER RING
9. SAFETY INTERLOCK HOLES
10. CONTROL PANEL

ENGLISH

ME73A_BOL_DE68-03794D-03_EN.indd 11 2013-09-11 1:58:14

CONTROL PANEL

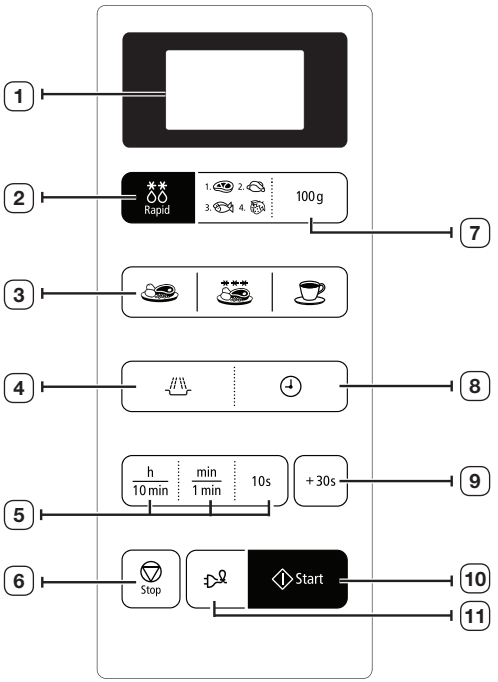

1. DISPLAY
2. AUTO RAPID DEFROST FEATURE SELECTION
3. AUTO REHEAT/COOK SELECTION
4. MICROWAVE MODE BUTTON
5. TIME SETTING BUTTON
6. STOP/CANCEL BUTTON
7. WEIGHT SELECTION
8. CLOCK SETTING
9. +30s BUTTON
10. START BUTTON
11. ENERGY SAVE BUTTON

ACCESSORIES

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.

1. **Roller ring**, to be placed in the centre of the oven.

   Purpose : The roller ring supports the turntable.

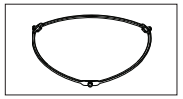

2. **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.

   Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.

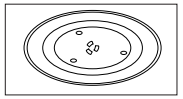

DO NOT operate the microwave oven without the roller ring and turntable.

ME73A_BOL_DE68-03794D-03_EN.indd 12 2013-09-11 1:58:14

SETTING THE TIME

Your microwave oven has an inbuilt clock. When power is supplied, ":0", "88:88" or "12:00" is automatically displayed on the display.
Please set the current time. The time can be displayed in either the 24- hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

Do not forget to reset the clock when you switch to and from summer and winter time.

Auto energy saving function

If you do not select any function when appliance is in the middle of setting or operating with temporary stop condition, function is canceled and clock will be displayed after 25 minutes.
Oven Lamp will be turned off after 5 minutes with door open condition.

1. To display the time in the...
24-hour notation
12-hour notation
Press the **Clock** button once or twice.

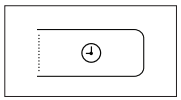

2. Set the hour with the h button and the minutes with the min button.

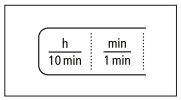

3. When the right time is displayed, press the **Clock** button again to start the clock.

Result : The time is displayed whenever you are not using the microwave oven.

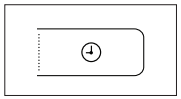

COOKING/REHEATING

The following procedure explains how to cook or reheat food.
Always check your cooking settings before leaving the oven unattended.
First, place the food in the centre of the turntable and close the door.

1. Press the **Power Level** button.

Result : The 800 W (maximum cooking power) indications are displayed:
Select the appropriate power level by pressing the **Power Level** button again until the corresponding wattage is displayed. Refer to the power level table on the next page.

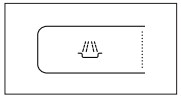

2. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** button.

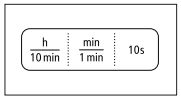

3. Press the **Start** button.

Result : The oven light comes on and the turntable starts rotating.
Cooking starts and when it has finished the oven beeps four times.

Never switch the microwave oven on when it is empty.

ENGLISH

ME73A_BOL_DE68-03794D-03_EN.indd 13 2013-09-11 1:58:15

POWER LEVELS

You can choose among the power levels below.

Power Level	Output
HIGH	800 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST (❄)	180 W
LOW	100 W

If you select higher power level, the cooking time must be decreased.

If you select lower power level, the cooking time must be increased.

STOPPING THE COOKING

You can stop cooking at any time to check the food.

1. To stop temporarily;
   Open the door.

   Result : Cooking stops. To resume cooking, close the door and press **Start** (⏀) again.

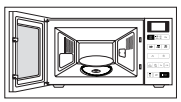

2. To stop completely;
   Press the **Stop** (▽) button.

   Result : The cooking stops.
   If you wish to cancel the cooking settings, press the **Stop** (▽) button again.

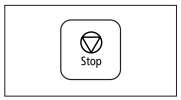

You can cancel any setting before starting cooking by simply pressing **Stop** (▽) button.

ADJUSTING THE COOKING TIME

You can increase the cooking time by pressing the **+30s** button once for each 30 seconds to be added.

1. Press the **+30s** button once for each 30 seconds to be added.

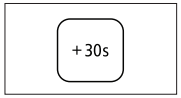

2. Press the **Start** (⏀) button.

SETTING THE ENERGY SAVE MODE

The oven has an energy save mode. This facility saves electricity when the oven is not in use.

- The oven will default to energy save mode after 5 minutes if not used. While in energy save mode, the display is blank and the oven cannot used.
- To remove energy save mode, open the door and then display shows “0”. The oven is ready for use.
- If you want to use energy save mode, press the **Energy Save** (🍃) button.

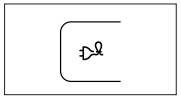

ME73A_BOL_DE68-03794D-03_EN.indd 14 2013-09-11 1:58:15

USING THE INSTANT REHEAT/COOK FEATURE

With the Instant Reheat feature, the cooking time is set automatically.
You can adjust the number of servings by pressing the appropriate Instant Reheat button the required number of times.
First, place the food in the centre of the turntable and close the door.

Press the **Instant Reheat/Cook** button which you want the required number of times.

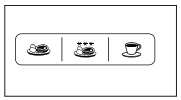

Result : Press Start (◇) button to start cooking. When it has finished:

1) The oven beeps four times.
2) The end reminder signal will beep 3 times. (once every minute)
3) The current time is displayed again.

Example: Press the **Drinks** button once times to reheat one cups of coffee. Refer to the table on the next page.

Use only recipients that are microwave-safe.

INSTANT REHEAT/COOK SETTINGS

The following table presents the various Instant Reheat/Cook Programmes, quantities, standing times and appropriate recommendations.

Food/Button	Serving size	Standing time	Recommendations
Ready meals	300-350 g 400-450 g	3 min.	Put on a ceramic plate and cover it with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and side dish like potatoes, rice or pasta).
Frozen ready meals	300-350 g 400-450 g	4 min.	Take frozen ready meal and check if dish is suitable for microwave. Pierce film of ready meal. Put the frozen ready meal in the centre. This programme is suitable for frozen ready meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).
Drinks (Coffee, milk, tea, water with room temperature)	150 ml (1 cup) 250 ml (1 mug)	1-2 min.	Pour into a ceramic cup and reheat uncovered. Place cup (150 ml) or mug (250 ml) in the centre of turntable. Stir carefully before and after standing time.

ENGLISH

ME73A_BOL_DE68-03794D-03_EN.indd 15 2013-09-11 1:58:16

USING THE AUTO RAPID DEFROST FEATURE

The auto rapid defrost feature enables you to defrost meat, poultry, fish or fruit/berry.
The defrost time and power level are set automatically. You simply select the programme and the weight.

Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.

1. Press the **Rapid Defrost** (⁂) button.

   Result : The following indication is displayed:

   

   Press the **Rapid Defrost** (⁂) button one or more times according to the type of food to be defrosted. Refer to the table on the next page for further details.

2. Select the food weight by pressing the **100 g** button. It is possible to set up to a maximum of 1500 g.

   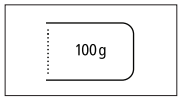

3. Press the **Start** (◈) button.

   Result :

   - Defrosting begins.
   - The oven beeps halfway through defrosting to remind you to turn the food over.
   - Press **Start** (◈) button again to finish defrosting.

You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled “Cooking/Reheating” on page 13 for further details.

AUTO RAPID DEFROST SETTINGS

The following table presents the various Auto Rapid Defrost programmes, quantities, standing times and appropriate recommendations.
Remove all kinds of package material before defrosting. Place meat, poultry, fish and fruit/berry on a ceramic plate.

Code/Food	Portion	Standing time	Recommendations
1. Meat	200-1500 g	20-90 min.	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat.
2. Poultry	200-1500 g	20-90 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions.
3. Fish	200-1500 g	20-80 min.	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets.
4. Fruit/Berry	100-600 g	5-20 min.	Spread fruits evenly into a flat glass dish. This programme is suitable for all kind of fruits.

ME73A_BOL_DE68-03794D-03_EN.indd 16 2013-09-11 1:58:16

MULTISTAGE COOKING

Your microwave oven can be programmed to cook food up to three stages.

Example: You wish to defrost food and cook it without having to reset the oven after each stage. You can thus defrost and cook a 500 g fish in three stages:

- Defrosting
- Cook I
- Cook II

You can set between two and three stages in multistage cooking.
If you set three stage, the first stage must be defrosting.
Don't press **Start** (◇) button until you've set the final stage.

1. Press the **Rapid Defrost** (❄❄) button once or more times.

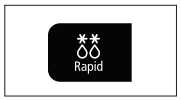

2. Set the weight by pressing the **100 g** buttons the appropriate number of times (500 g in the example).

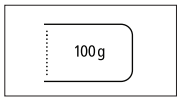

3. Press the **Power Level** (🍲) button.
The microwave mode (I) :

🍲 ; if necessary, set the power level by pressing the **Power Level** (🍲) button again one or more times (600 W in the example).

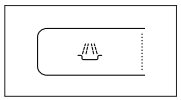

4. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons the appropiate number of times (4 minutes in the example).

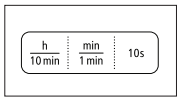

5. Press the **Power Level** (🍲) button.
The microwave mode (II) :

🍲 ; if necessary, set the power level by pressing the **Power Level** (🍲) button again one or more times (450 W in the example).

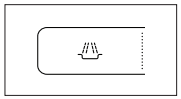

6. Set the cooking time by pressing the **10 min**, **1 min** and **10 s** buttons the appropriate number of times (5 minutes in the example).

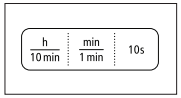

7. Press the **Start** (◇) button.

Result : The three modes [defrosting and cooking (I, II)] are selected on after. According to the defrosting mode that you have chosen, the oven may beep half way through defrosting to remind you to turn the food over.

- When cooking is over, the oven beeps four times.

ENGLISH

ME73A_BOL_DE68-03794D-03_EN.indd 17 2013-09-11 1:58:17

COOKWARE GUIDE

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used. Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.
The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-safe	Comments
Aluminum foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or newspaper	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ **: Recommended**
✓✗ **: Use caution**
✗ **: Unsafe**

ME73A_BOL_DE68-03794D-03_EN.indd 18 2013-09-11 1:58:17

WHAT TO DO IF YOU ARE IN DOUBT OR HAVE A PROBLEM

If you have any of the problems listed below try the solutions given.

This is normal.

- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

The oven does not start when you press the (◊) button.

- Is the door completely closed?

The food is not cooked at all.

- Have you set the timer correctly and/or pressed the (◊) button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

The food is either overcooked or undercooked.

- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

Sparking and cracking occur inside the oven (arcing).

- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminum foil too close to the inside walls?

The light bulb is not working.

- The Light bulb should not be replaced in person for safety reasons. Please contact nearest authorised Samsung customer care, to arrange for a qualified engineer to replace the bulb.

The oven causes interference with radios or televisions.

- Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.

If the above guidelines do not enable you to solve the problem, then contact your local SAMSUNG customer service centre.
Please have the following information read;

- The model and serial numbers, normally printed on the rear of the oven
- Your warranty details
- A clear description of the problem

Then contact your local dealer or SAMSUNG aftersales service.

TECHNICAL SPECIFICATIONS

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	ME73A
Power source	230 V ~ 50 Hz
Power consumption Microwave	 1150 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75S(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	 489 x 275 x 349 mm 330 x 211 x 309 mm
Volume	20 liter
Weight Net	 11.5 kg approx

ME73A_BOL_DE68-03794D-03_EN.indd 19 2013-09-11 1:58:17

QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
BOSNIA	051 133 1999	www.samsung.com
BULGARIA	07001 33 11, normal tariff	
CROATIA	062 - SAMSUNG (062 726 786)	
CZECH	800 - SAMSUNG (800-726786)	
HUNGARY	06-80-SAMSUNG (726-7864)	
MACEDONIA	023 207 777	
MONTENEGRO	020 405 888	
POLAND	0 801-1SAMSUNG(172-678) * lub +48 22 607-93-33 ** * (całkowity koszt połączenia jak za 1 impuls według taryfy operatora) ** (koszt połączenia według taryfy operatora)	www.samsung.com/pl
ROMANIA	08008 SAMSUNG (08008 726 7864) TOLL FREE No.	www.samsung.com
SERBIA	+381 11 321 6899 (old number still active 0700 7267864)	
SLOVAKIA	0800 - SAMSUNG (0800-726 786)	
LITHUANIA	8-800-77777	www.samsung.com/lt
LATVIA	8000-7267	www.samsung.com/lv
ESTONIA	800-7267	www.samsung.com/ee
SLOVENIA	080 - MYSAMSUNG (080 69 726 7864)	www.samsung.com/si

Code No.: DE68-03794D-03